


NO.5 - RIBS (MAKE 3)

NO.7 - 1/32 THICK WING GUIDES, GLUED TO SIDE OF CENTER RIB AND PIECE NO.8.


NO.1 - LEADING EDGE

NO.4 - ON EDGE GLUE (MAKE 2) END RIBS

PERKY

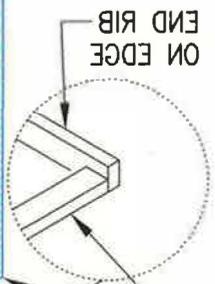

ALL SPARS AND RIBS ARE 1/16 x 1/8 Balsa

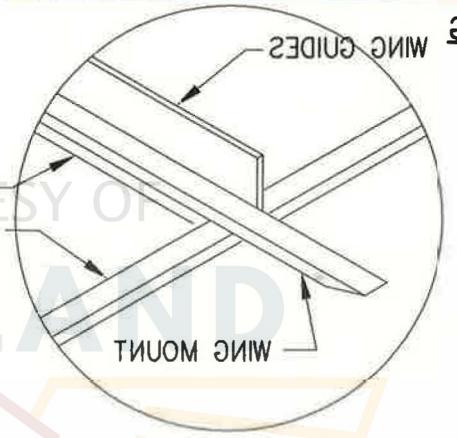

W I N G

NO.2 - CUT PAPER ALONG WING OUTER EDGE ABOUT 1" AT LEADING AND TRAILING EDGES NEAR CENTER RIB

NO.3 - TRAILING EDGE

TRAILING EDGE PIECE


NO.6 - WING MOUNT TAPER ENDS AS SHOWN ON FUSELAGE VIEW

ALL SPARS AND RIBS ARE 1/16 x 1/8 Balsa

NO.9 - CENTER RIB

NO.8 - LEADING EDGE

NO.11 - END RIBS (MAKE 2) GLUE ON EDGE

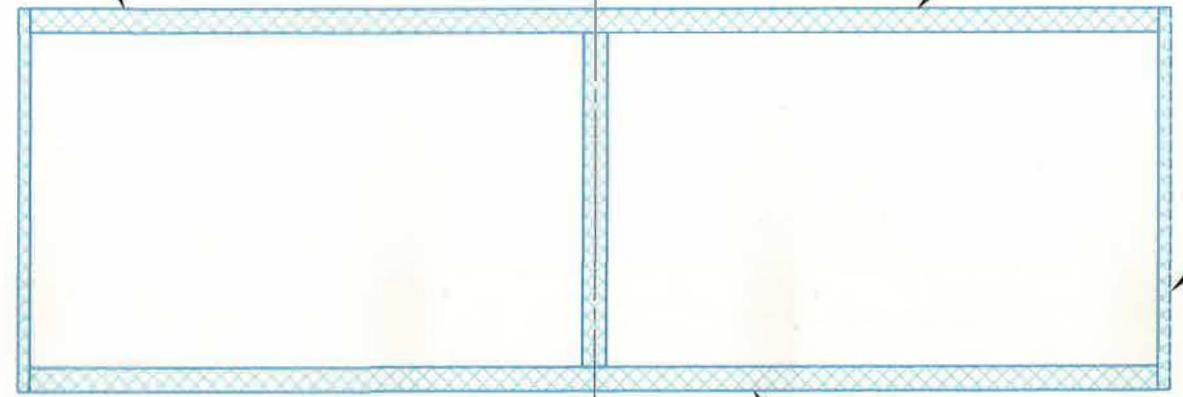

T A I L

NO.10 - TRAILING EDGE

CAREFULLY. HAPPY FLYING !! AND READ THE INSTRUCTIONS FOLLOW THE NUMBERED STEPS. INSTACTIONS READ CORRECTLY. BACKWARDS BUT ALL THE "PERKY" ON THE WING IS DOWN SO THAT THE NAME TAPE PLAN TO BOARD UPSIDE

PERKY

DESIGNED BY GEORGE XENAKIS REDRAWN AND KITTED BY

KMODELS K-313X

LEE'S HOBBIES 2007

OAKLAND

CLOUD

ALL RIGHTS RESERVED

George Xenakis *Perky*
1/32" sheet balsa parts

